

# Pipo<sup>®</sup> Communications

*Emphasis is on Quality and Reliability*

TEL: (323) 466-5444 • WWW.PIPO.CC

## DTMF ENCODER BASIC INFO

### CONNECTIONS

#### J1

RED ..... (P1) ..... (+) 6-26 VDC  
 GREEN ..... (P2) ..... (-) GROUND  
 BLACK ..... (P3) ..... AUDIO OUT  
 BROWN ..... (P4) ..... RELAY CONTACT\*  
 BRN/WHITE ..... (P5) ..... RELAY CONTACT\*  
 \*SPST 26 WATTS 1A @ 26 VDC, RESISTIVE LOAD

### JUMPERS & ADJUSTMENTS

JP1 ..... MEMORY DISABLE ..... (CLOSE)  
 JP2 ..... STORE & SEND ..... (CLOSE)  
 JP3 ..... HIGH IMPEDANCE ..... (OPEN)  
 JP3 ..... LOW IMPEDANCE ..... (CLOSE)  
 JP4 ..... RELAY NC ..... (CLOSE)\*  
 \*INSTALLED

### PCB EYELET

(G) ..... GROUND  
 (M) ..... MIC MUTE RELAY\*  
 (PTT) ..... PTT XMTR\*  
 \*TRANSISTOR OUTPUT 200 MA MAX @ 20 VDC

P1 ..... AUDIO ADJ. POT  
 P2 ..... PTT HOLD ADJ. POT

## DTMF BASIC OPERATION

### **DTMF LAST NUMBER REDIAL (LNR)\***

PRESS \* + # (TOGETHER) THEN RELEASE TO SEND.

\*VOLATILE MEMORY, CLEARS WITH POWER OFF

### **DTMF STORE AND SEND\***

**TO STORE:** PRESS \* + 0 (TOGETHER, TWICE), FOLLOWED BY NUMBERS TO STORE.

**TO SEND:** PRESS 0 + # (TOGETHER), TWICE.

### **DTMF MEMORY DIALING (1 TO 9 LOCATIONS, 30 DIGITS EACH)**

**TO STORE:** PRESS \* + 0 (TOGETHER), THEN 1 (FOR MEMORY 1 LOCATION) FOLLOWED BY THE NUMBERS TO STORE.

**TO STORE:** PRESS \* + 0 (TOGETHER), THEN 2 (FOR MEMORY 2 LOCATION) FOLLOWED BY THE NUMBERS TO STORE.

**TO SEND:** MEMORY 1 LOCATION, PRESS 0 + # (TOGETHER) THEN 1.

**TO SEND:** MEMORY 2 LOCATION, PRESS 0 + # (TOGETHER) THEN 2.

## DTMF SPECIAL FEATURES

### **DTMF SINGLE TONE GENERATOR**

(PRESS 0 + 1 (TOGETHER) = 697HZ  
 (PRESS 0 + 2 (TOGETHER) = 770HZ  
 (PRESS 0 + 3 (TOGETHER) = 852HZ  
 (PRESS 0 + 4 (TOGETHER) = 941HZ  
 (PRESS 0 + 5 (TOGETHER) = 1209HZ  
 (PRESS 0 + 6 (TOGETHER) = 1336HZ  
 (PRESS 0 + 7 (TOGETHER) = 1477HZ  
 (PRESS 0 + 8 (TOGETHER) = 1633HZ  
 (PRESS 0 + 9 (TOGETHER) = 1000HZ

### **VARIABLE TONE GENERATOR (50Hz to 5kHz)**

PRESS \* + 0 + # (TOGETHER) FOR 3 SECONDS, THEN RELEASE. (STARTS AT 1kHz)  
 PRESS \* TO DECREASE FREQ., PRESS # TO INCREASE FREQ. (50HZ INCREMENTS)  
 PRESS 0 TO RETURN TO 1kHz TONE. PRESS ANY KEY TO EXIT FEATURE.

### **VERISON ID**

PRESS \* + 1 (TOGETHER) FOR VERSION ID