

Pipo[®] Communications

Emphasis is on Quality and Reliability

TEL: (323) 466-5444 • WEB: PIPO.CC

DTMF ENCODER BASIC INFO

CONNECTIONS

J1

RED (P1) (+) 6-26 VDC
 GREEN (P2) (-) GROUND
 BLACK (P3) AUDIO OUT
 BROWN (P4) RELAY CONTACT*
 WHITE (P5) RELAY CONTACT*
 *SPST 26 WATTS 1A @ 26 VDC, RESISTIVE LOAD

JUMPERS & ADJUSTMENTS

JP1 MEMORY DISABLE (CLOSE)*
 JP2 STORE & SEND (CLOSE)*
 JP3 HIGH IMPEDANCE (OPEN)
 JP3 LOW IMPEDANCE (CLOSE)
 JP4 RELAY NC (CLOSE)*
 *INSTALLED

PCB EYELET

(G) GROUND
 (M) MIC MUTE RELAY*
 (PTT) PTT XMTR*
 *TRANSISTOR OUTPUT 200 MA MAX @ 20 VDC

P1 AUDIO ADJ. POT
 P1A PTT HOLD ADJ. POT

DTMF BASIC OPERATION

DTMF LAST NUMBER REDIAL (LNR)*

PRESS * + # (TOGETHER) THEN RELEASE TO SEND.

*VOLATILE MEMORY, CLEARS WITH POWER OFF

DTMF STORE AND SEND*

TO STORE: PRESS * + 0 (TOGETHER, TWICE), FOLLOWED BY NUMBERS TO STORE.

TO SEND: PRESS 0 + # (TOGETHER), TWICE.

DTMF MEMORY DIALING (1 TO 9 LOCATIONS, 30 DIGITS EACH)

TO STORE: PRESS * + 0 (TOGETHER), THEN 1 (FOR MEMORY 1 LOCATION) FOLLOWED BY THE NUMBERS TO STORE.

TO STORE: PRESS * + 0 (TOGETHER), THEN 2 (FOR MEMORY 2 LOCATION) FOLLOWED BY THE NUMBERS TO STORE.

TO SEND: MEMORY 1 LOCATION, PRESS 0 + # (TOGETHER) THEN 1.

TO SEND: MEMORY 2 LOCATION, PRESS 0 + # (TOGETHER) THEN 2.

DTMF SPECIAL FEATURES

DTMF SINGLE TONE GENERATOR

(PRESS 0 + 1 (TOGETHER) = 697HZ
 (PRESS 0 + 2 (TOGETHER) = 770HZ
 (PRESS 0 + 3 (TOGETHER) = 852HZ
 (PRESS 0 + 4 (TOGETHER) = 941HZ
 (PRESS 0 + 5 (TOGETHER) = 1209HZ
 (PRESS 0 + 6 (TOGETHER) = 1336HZ
 (PRESS 0 + 7 (TOGETHER) = 1477HZ
 (PRESS 0 + 8 (TOGETHER) = 1633HZ
 (PRESS 0 + 9 (TOGETHER) = 1000HZ

VARIABLE TONE GENERATOR (50Hz to 5kHz)

PRESS * + 0 + # (TOGETHER) FOR 3 SECONDS, THEN RELEASE. (STARTS AT 1kHz)
 PRESS * TO DECREASE FREQ., PRESS # TO INCREASE FREQ. (50HZ INCREMENTS)
 PRESS 0 TO RETURN TO 1kHz TONE. PRESS ANY KEY TO EXIT FEATURE.

VERISON ID

PRESS * + 1 (TOGETHER) FOR VERSION ID